


一.Wire connection definition

num	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Color	Blue red	Pink	Yellow white	Red	Blue White	Green Red	Orange	Light Blue	Green	Green black	Yellow red	Brown white	Brown	yellow	Blue	Black		BLACK RED
Function	Gear 2	Gear 1	Fuel level	Speed	Rotation speed	Gear N	Left turn	Right turn	Cathode	Gear 3	Gear 4	Gear 5	Gear 6	5V Output	High beam	Anode	Engine fault light	

二.Wire connection diagram

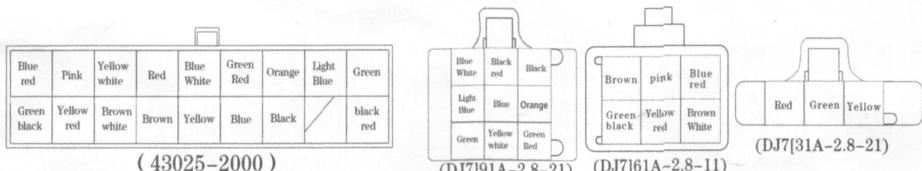

三.Interface display

Rotation value range

Rotation value display

Button

speed

Unit of speed

Fuel javel

mileage

四.Function Description

1. speed:the maximum speed is 12000r/min;
2. Mileage:ODO(total mileage)maximum displayed mileage is 99999km,TRIP(subtotal mileage)maximum displayed mileage is 9999.9km;
3. Oil volume:5 bars of oil volume display,when the oil level is not connected ,the working voltage is displayed;
4. Speed:the maximum sped is 1200r/min;
5. indicator light:turn signal left light is green,right light is green ,high beam light is blue,neutraal indicator light is green ,enging failure light is yellow;
6. Gear position:with1-6 gear liquid crysta display;
7. Blacklight with blacklight;
8. button:switch between total milagee and subtotal mileaoe.reset subtotal mileaoetc.

五.Parameter Settings

Short press the button on the working interface to switch between ODO(total mileage) and TRIP(subtotal mileage); In the ODO(total mileage) mode of the working interface, long press the button to switch the speed between metric and inch(km/h, mph); In the TRIP(subtotal mileage) mode of the work interface, long press the button to reset the subtotal mileage; Background parameter setting press and hold the button to turn on the switch for 5 seconds, the screen displays SETUP, short press the button again to enter the background.

Parameter setting

1. Setting the number of magnets of the vehicle speed sensor. The interface "E-2" flashes (the factory setting is 2 magnets number), the magnets number is 1-8; short press the button to increase 1, long press the button to save and switch to the next parameter setting;
2. Tire circumference setting: The interface jumps to "e-1902" flashing (the factory setting tire circumference is 1902mm), short press the button to increase 1, long press the button to shift; after setting the fourth digit, long press the button to switch to the next parameter setting;
3. Engine stroke setting. The interface "1p" flashes (factory setting 1), short press the button 1-4 to switch. After the above parameter setting is completed, long press the button to exit the parameter setting interface; The parameter Setting in terface will automatically exit without operation for 20s and return to the working interface;

六.Clear frnction

Press and hold the button to turn on the switch for 5 seconds, the screen displays SETUP. After releasing the button, long press to enter the reset program (you can't switch after selection, short press once) to reset once, and the reset times are greater than three times to exit directly, and no more reset! Each short press reduces the total mileage by 200 kilometers, the number of reset times increases by 1, and long press to exit. There are a total of three resetting opportunities, and the total mileage is less than 200 kilometers to be cleared directly, and it will be reduced by 200 kilometers for each press of more than 200 kilometers. The above setting parameter keys will automatically exit without any action for 20s.

一. 接线端子定义

位号	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
线色	蓝 红	粉	黄 白	红	蓝 白	绿 红	橙	浅 蓝	绿	绿 黑	黄 红	棕 白	棕	黄	蓝	黑	黑 红	
功能	2 挡	1 档	油 位	车 速	转 速	N 档	左 转	右 转	负 极	3 档	4 档	5 档	6 档	5V 输出	远 光	正 极	发 故 障 机 灯	

二. 端子图


集线端无线口视图



分线端无线口视图



三. 显示界面

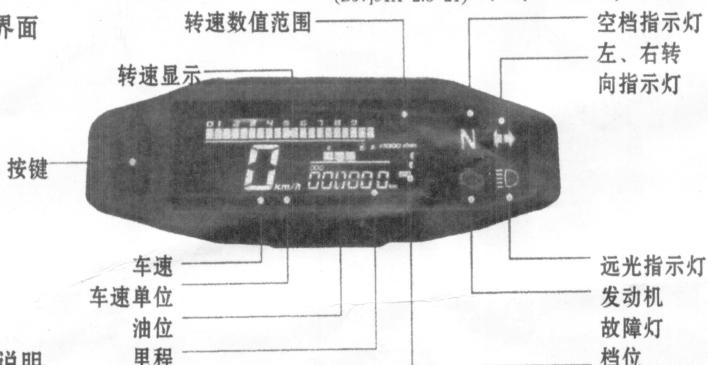

四. 功能说明

- 速度:最大显示车速为199km/h;
- 里程:ODO(总里程)最大显示里程为999999km, TRIP (小计里程)最大显示里程为99999.9km;
- 油量:5格油量显示, 未接入油位时显示工作电压;
- 转速:最大转速12000r/min
- 指示灯:转向灯左灯为绿色, 右灯为绿色, 远光灯为蓝色, 空档指示灯为绿色, 发动机故障灯为黄色。
- 档位:带1~6液晶显示;
- 背光:白色背光;
- 按键:总里程、小计里程切换, 小计里程清零等。

五. 参数设置

工作界面短按按键进行ODO(总里程)、TRIP (小计里程)之间的切换;

工作界面ODO(总里程)模式下长按按键进行车速公、英制切换(km/hmph);

工作界面TRIP (小计里程)模式下长按按键进行小里程清零;

后台参数设置:

按住按键开电门不放5S后, 屏上显示SETUP, 再次短按按键进入后台参数

设置:

1. 车速传感器磁钢数设置:

界面“E-2”闪烁(出厂设定2磁钢数), 磁钢数 1~9; 短按按键加1, 长按按键保存切换至下一个参数设置;

2. 轮胎周长设置:

界面跳入“C-1902”闪烁(出厂设定轮胎周长1902mm), 短按按键加1, 长按按键移位; 设置完第四位后, 长按按键切换至下一个参数设置;

3. 发动机冲程设置:

界面“1P”闪烁(出厂设定1), 短按按键1~4之间切换。以上参数设置完成后长按按键退出参数设置界面;

参数设置界面无操作20s自动退出, 返回工作界面:

六. 清零程序

按住按键开电门不放5s后, 屏上显示SETUP松开按键后, 长按进入清零程序(选择后不能再切换, 短按一次即清零一次, 清零次数大于三次直接退出, 不能再清零)

每次短按减少总里程200公里, 清零次数加1, 长按退出。共三次清零机会,

总里程不足200公里直接清零, 超过200公里每按一次减少200公里。

以上设置参数按键无动作20s均自动退出。